

Assembling Your Retrofit Kit Protective Shield

BSI's Retrofit Kits, Models #BSI-RK6 and #BSI-RK24, contain the panel and pre-attached clips.

- Carefully remove panel from shipping container.
- The RK6 model will be supplied with two (2) clips on each side, totaling four (4) clips.
- The RK24 model will be supplied with three (3) clips on each side, totaling six (6) clips.
- Adjust your current BSI food shield into a full-serve position and drop glass panel into its lowest position on the posts (making room for Retrofit Kit to attach above).
- Securely holding the Retrofit panel on both sides, push clips on either side around existing post to secure new panel to guard (figure 1).
- To remove Retrofit panel, carefully pull panel with clips away from posts on both sides.


Figure 1: Simultaneously push the clips on both sides of the panel onto the existing posts.




BSI-RK6 Retrofit Kit shown with XGuard. Bracket system in full-service position lowered to counter.



BSI-RK24 Retrofit Kit shown with Advance Guard. Bracket system in full-service position lowered to counter.

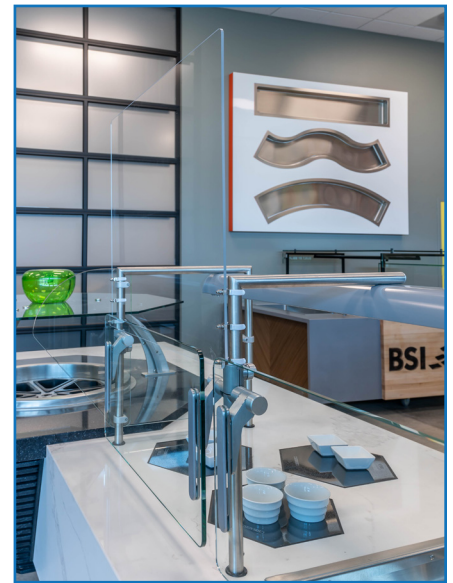

Front and rear view of clips on post.

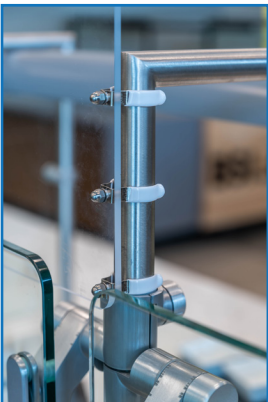

Cleaning Your Plexiglass Food Shield:

1. Wipe dust and dirt from the plexiglass.
2. Wet plexiglass with solution made from water and dish soap.
3. Wipe the plexiglass until it is dry.

Avoid using products with alcohol, ammonia, or aromatics.